


Art.-Nr. 100.0874.xx

Compact Hochschrank Standard




Montageanleitung
Assembly instruction
Instruction de montage

Vollauszug Compact Hochschrank Standard zu Rohrrahmen
Full-extension runner Compact Hochschrank Standard for tubular frames
Extension complète Compact Hochschrank Standar pour cadre tubulaire





6295 Mosen
Switzerland
T +41 41 919 94 00
www.peka-system.ch

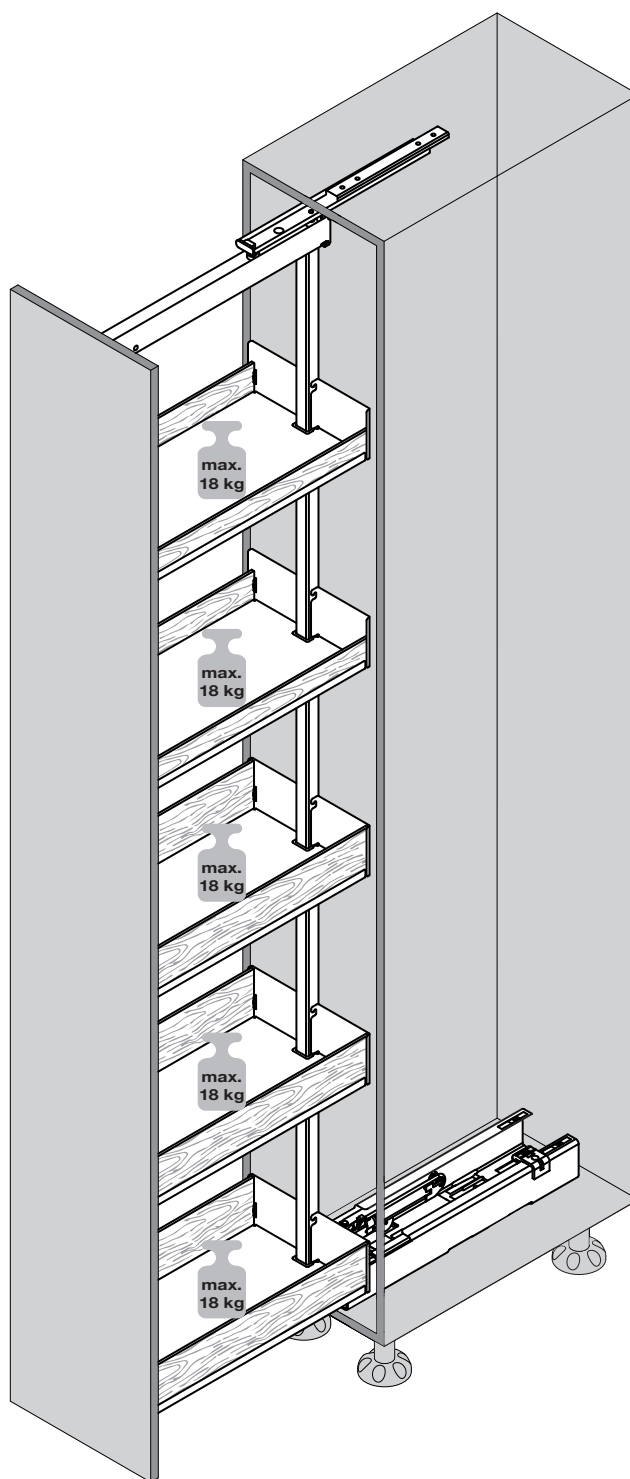


1

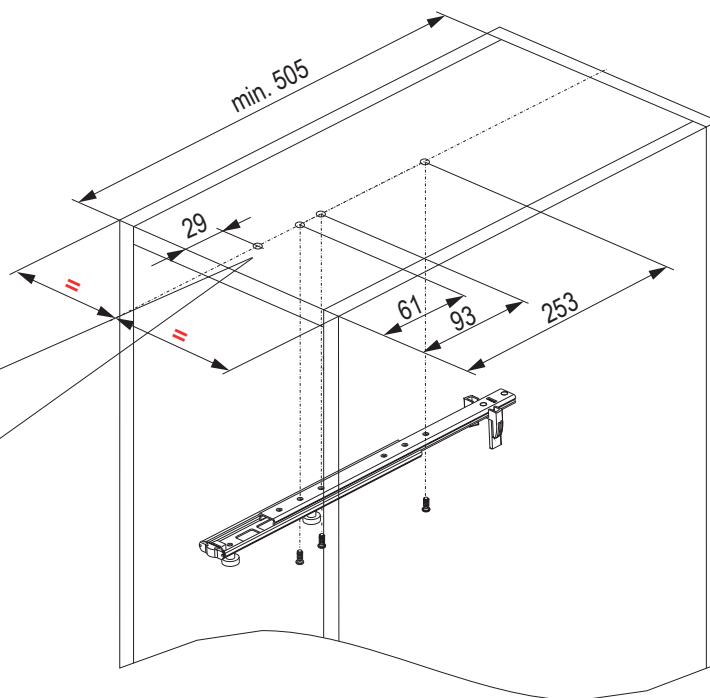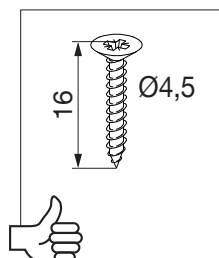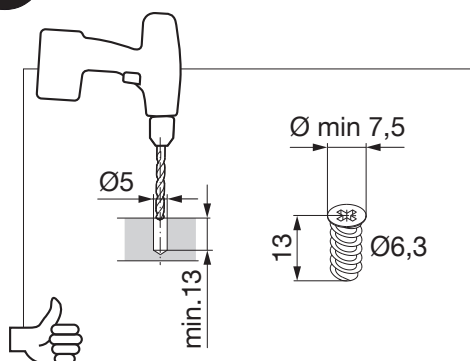


2

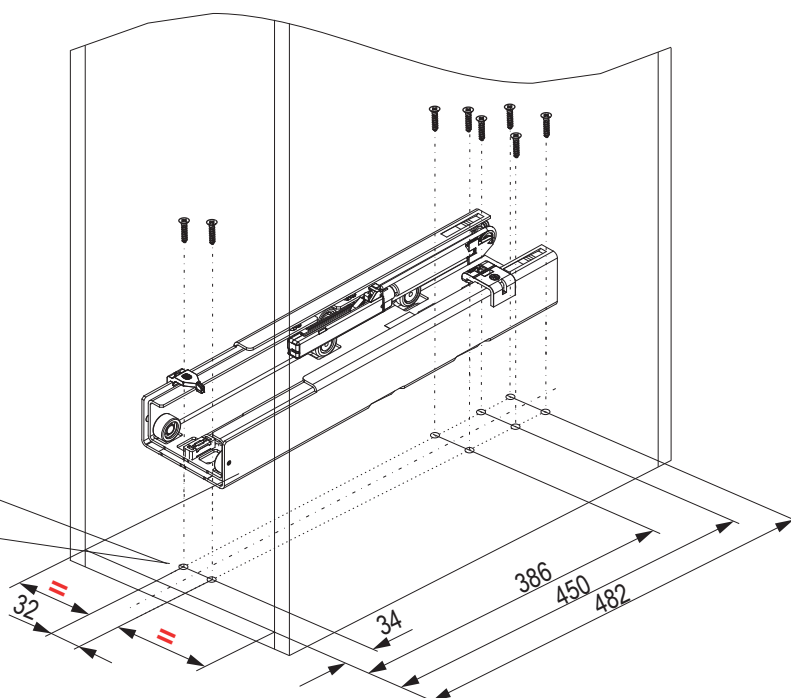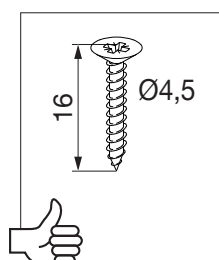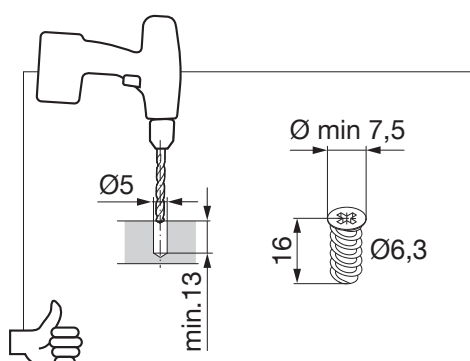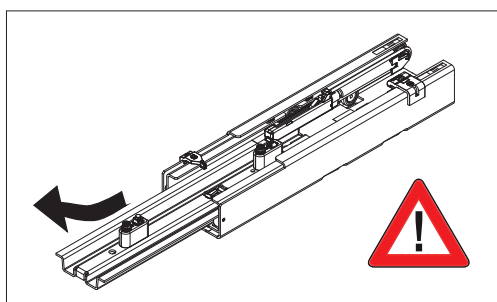


3

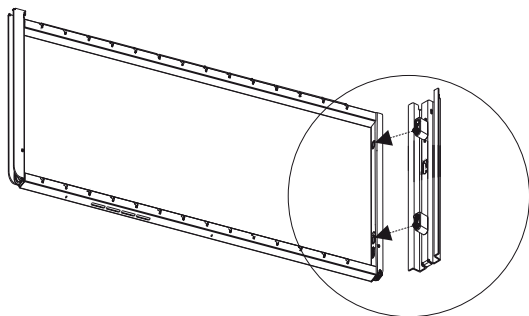


a

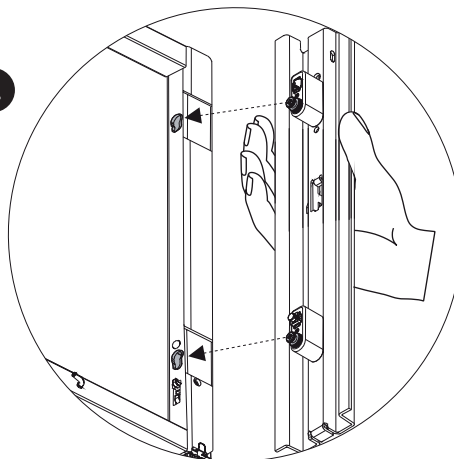




b

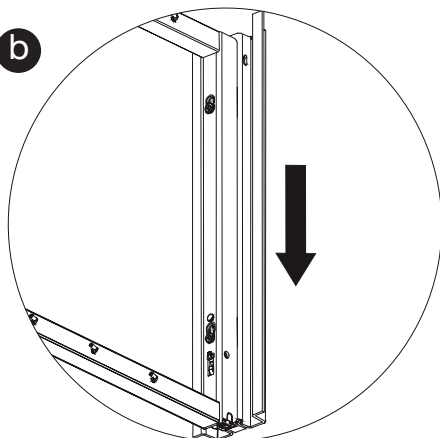


c

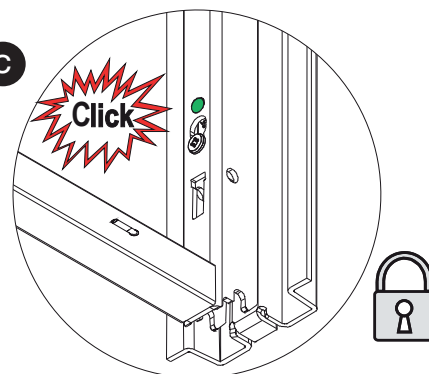


4

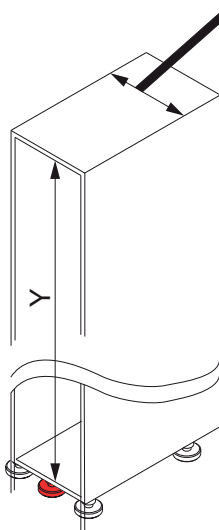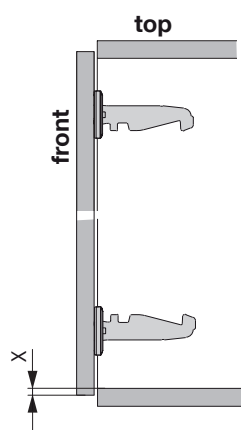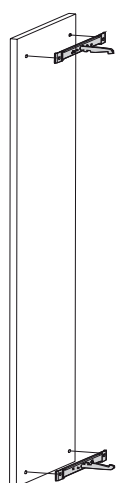


+ 1x 

	Z
150	89
275	200
300	225
400	325
500	425
600	525



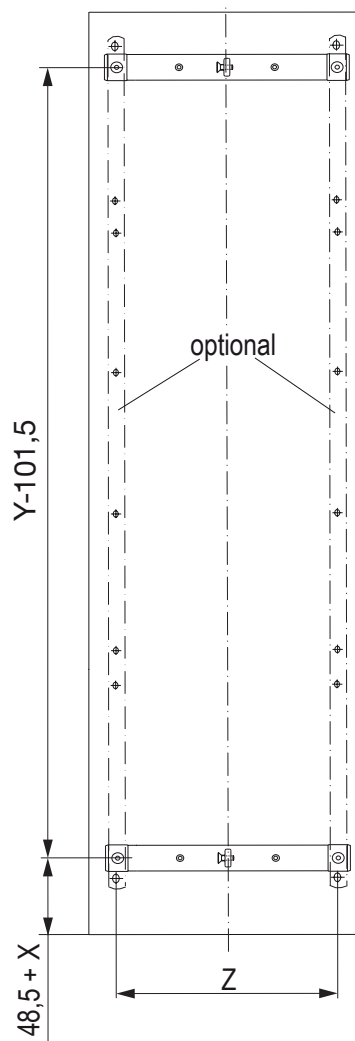


5

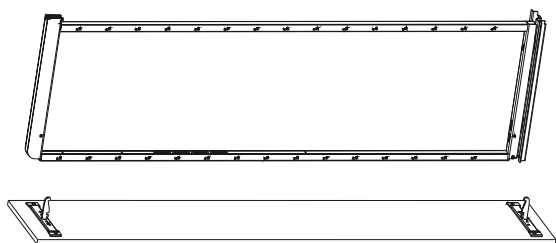


a

Top

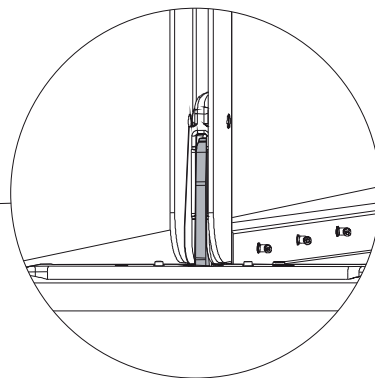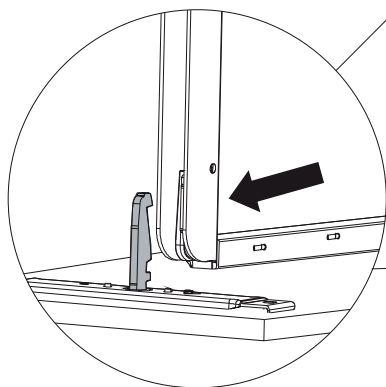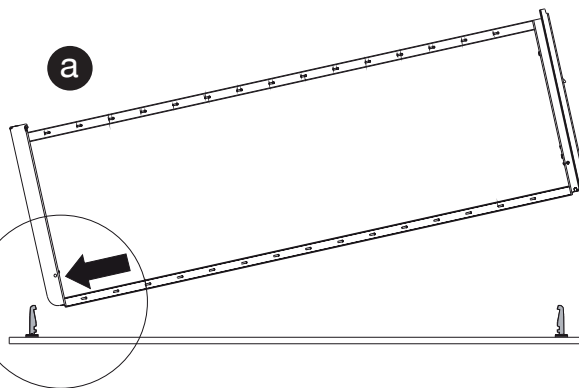


b

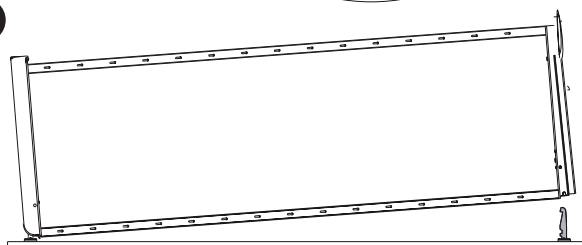


Click



6

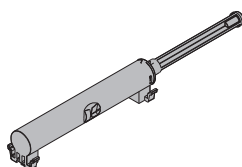

Click

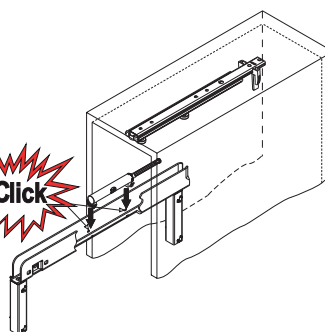

7

