


Parts List

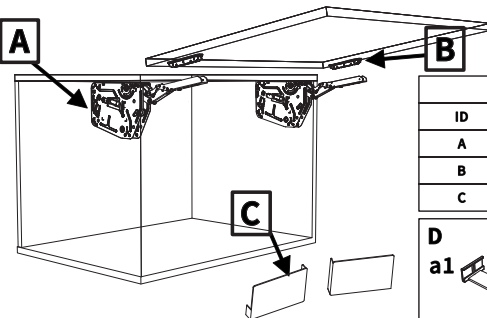

ID	Name	NO
A	Body lift	2
B	Bases	2
C	Body cover	2

D

a1 a2 a3 x1

G

x1

E

x8

4x38mm


F

x8

4x14mm


Special Installation Cases

I

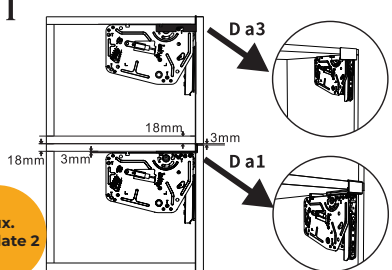


Aux. template 2


II

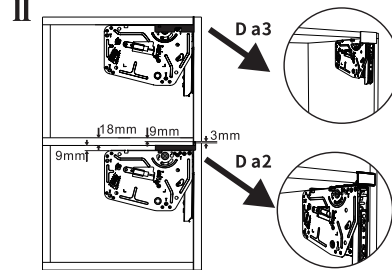

III

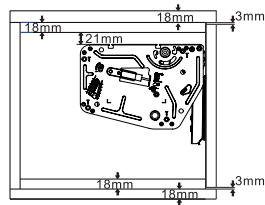

When the door height is equal with the cabinet net height, the lift installation should be moved down 21mm, to prevent collision between top and bottom edges of cabinet doors

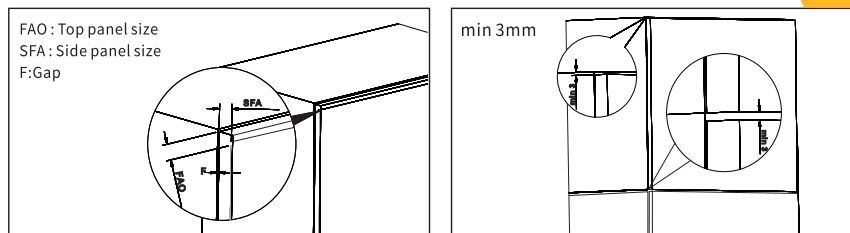


Normal Installation Case

WARNING


Don't press down on lever if the front is not be installed, to avoid injury and damage to the lift.




1 Panel Positioning and Drilling

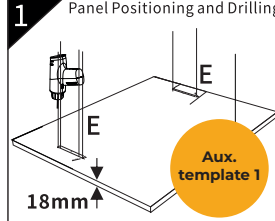


2 Installation Bases

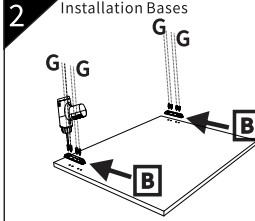


3 Install Positioning Card

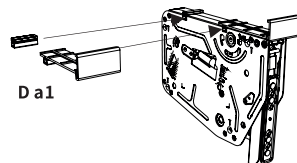


4 Put on the Lifts

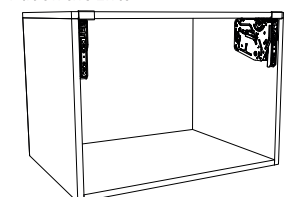


5 Lifts Installation

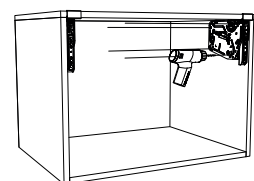

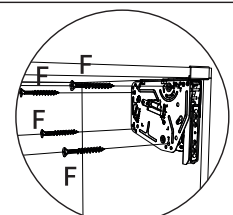

6 Remove the Positioning Card

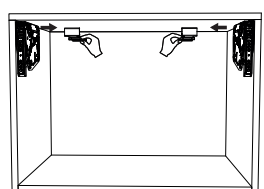

7 Remove the Safety Clip

